

Procedure for Setting mmol/L Unit in LAQUAtwin Ion Pocket Meters

This procedure is only applicable for LAQUAtwin Na-11, K-11, NO3-11, and Ca-11 models, which have special set-up mode to show reading in mmol/L unit. Note that the mmol/L unit itself is not indicated in the special set-up mode and will not appear on the LCD after following this procedure.

1. Press ON/OFF button to switch off the meter.



2. Press and hold MEAS, CAL, and ON/OFF buttons simultaneously for 3 seconds.



3. Wait for the meter to display Init.



4. Press and hold MEAS button for 5 seconds. The meter will display ON and switch off automatically.



5. Press MEAS and ON/OFF buttons simultaneously for 3 seconds.



6. Wait for the meter to display unit setting.




7. Press MEAS button repeatedly until both ppm and mg/L units disappear and Unit alone is displayed.



This indicates mmol/L unit but does not display mmol/L on the LCD

8. Press CAL button repeatedly until the meter switches off.

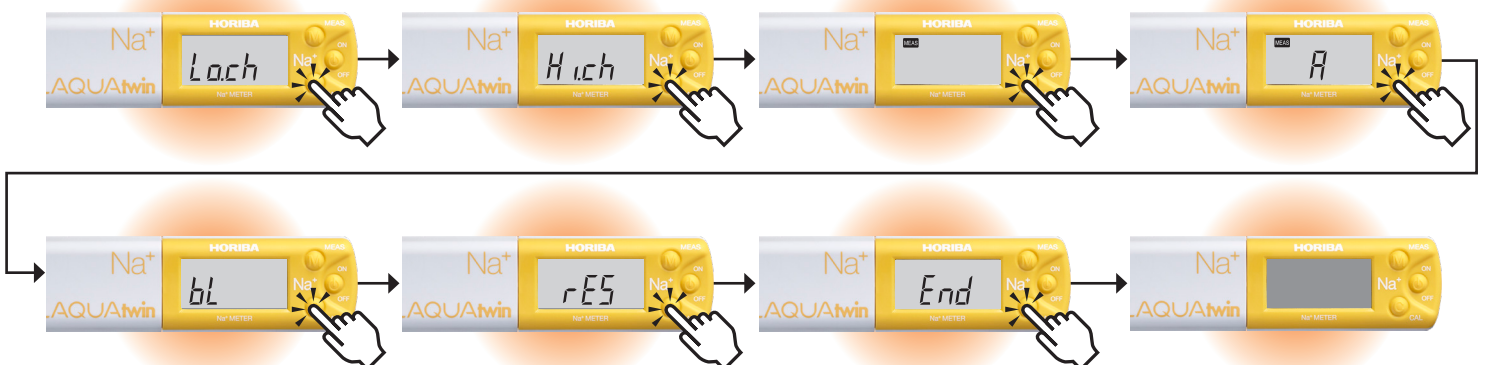

Scan QR code with your mobile device to know more about LAQUAtwin Ion Pocket Meters

